

ALL PART NUMBERS



Tip the seat forward (on machines equipped with OPS in seat, unplug quick connect). Remove the two hinge bolts from seat and mounting plate to remove seat from tractor. Remove plastic cover from bottom of seat and unplug wire harness from OP switch to be used in new seat.

PN: 6872

1. Insert OP switch PN: 81212 into seat pan and attach wire harness removed from original seat by attaching the ends onto new switch.
2. Place seat onto plate with the tabs down and to front of the seat. Start front two 5/16 - 18 bolts and finger tighten. Place rubber stopper onto other 2 bolts and attach rear bolts into seat. Tighten all bolts.



3. Attach the hinge plate to tractor using the 2 shoulder bolts and nuts supplied in bolt bag. Connect the wiring quick coupler and secure wire making sure it doesn't get caught or pinched when seat is moved forward and returned to seating position.

PN: 6874 and PN: 6875

1. Remove lower seat cushion by removing two T25 torx screws. Lift seat cushion and slide forward to remove.
2. Place seat onto plate with the tabs down and to front of seat. Start front two 5/16 - 18 bolts and nuts and finger tighten. Place rubber stopper onto other 2 bolts and attach rear bolts and nuts into seat. Tighten all bolts.
3. Install OP switch PN: 7961 onto seat bottom (see Grammer you-tube link <https://www.youtube.com/watch?v=PKPcTB2ILpo&t=3s>).
4. Using wire harness removed from original seat attach ends using butt connector to OP switch wire.
5. Attach the hinge plate to tractor using the two shoulder bolts and nuts supplied in bolt bag. Connect the wiring quick coupler and secure wire making sure it doesn't get caught or pinched when seat is moved forward and returned to seating position.

